




Clock Base Movement Mounting Instructions

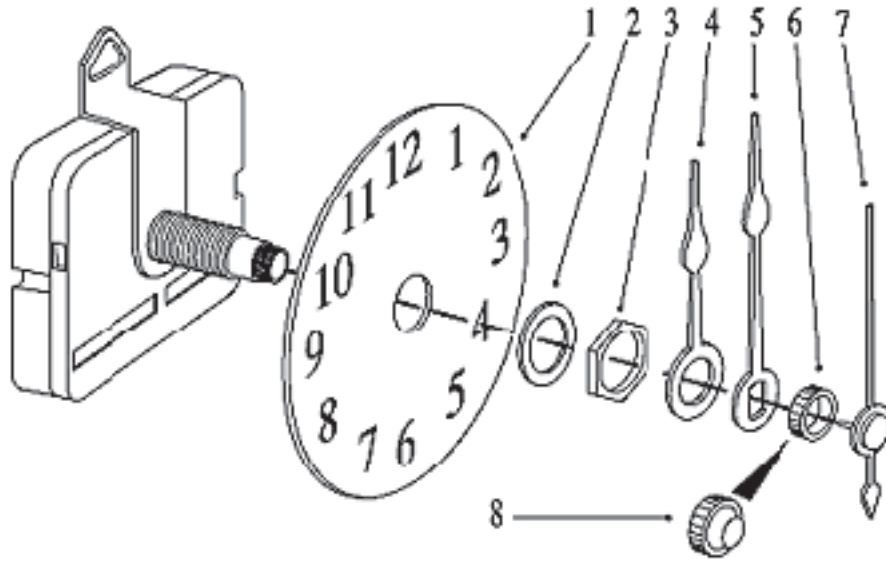

1 Place clock body so that the shaft is going through the hole on the front of the clock and the base is hiding on the back side.



2 Slide brass washer over shaft.




3 Attach dial mounting hex nut.



4 Gently press the hour hand onto the shaft at the 12:00 position



5 Gently press the minute hand over the shaft at the 12:00 position and screw the minute nut in place

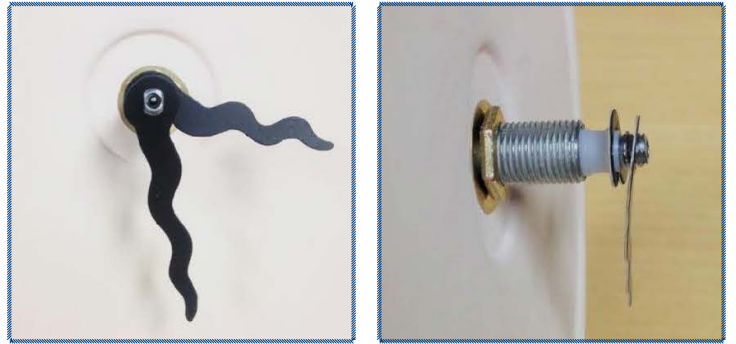

6 If a second hand is included in clock hands kit, screw that on the very top of the shaft at the 12:00 position. This will cap everything off



7 If no second hand is being used, screw on the cap nut to cap everything off

